



Take out the screws



Remove the bottom frame



## Take out the screws






Take out the pickguard




The Borsi pickup can be installed here



The Borsi pickup can be installed with the factory Yamaha screws

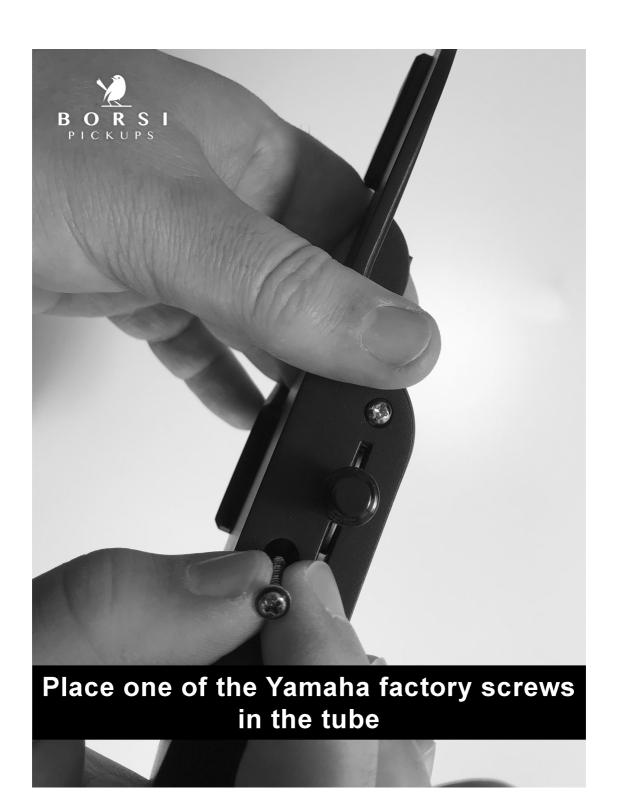





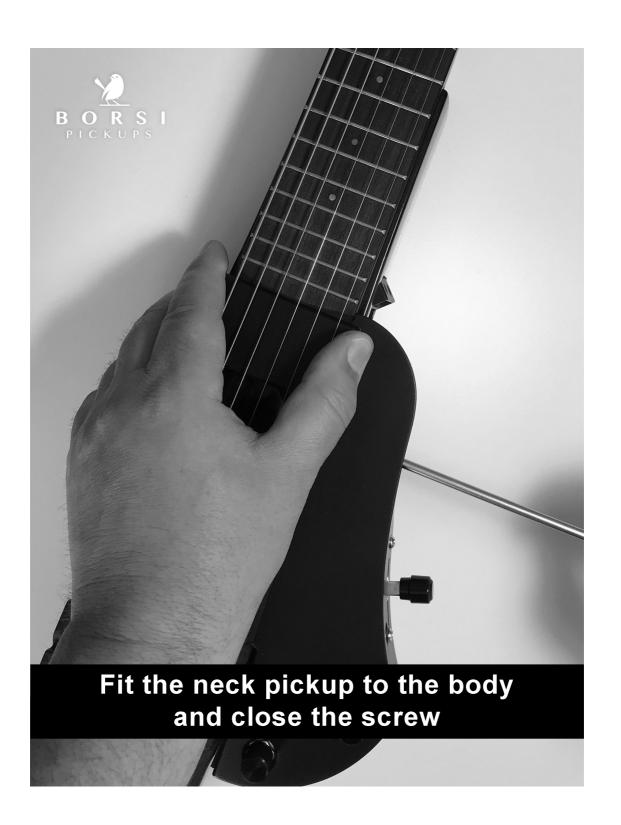



Tighten the screw next to the bridge

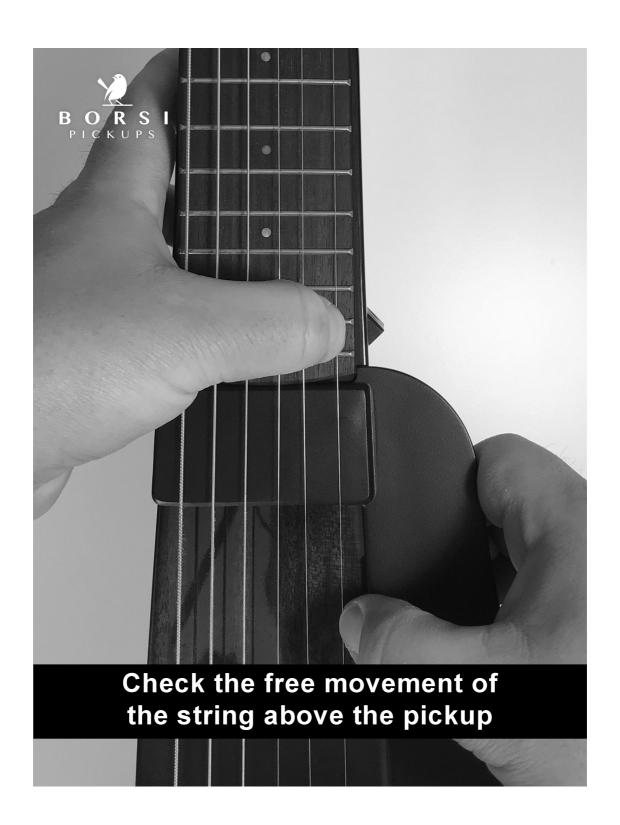

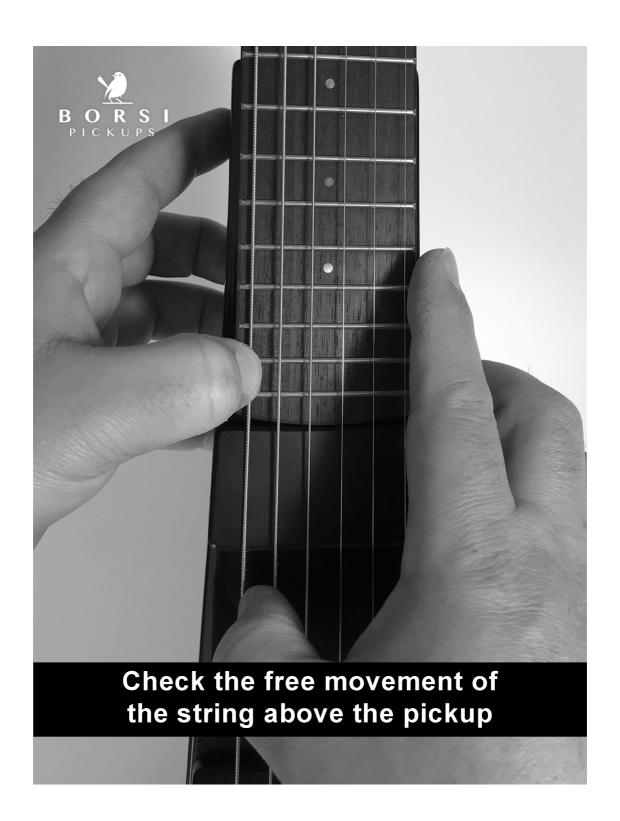



Ready...